

# INSTRUCTIONS FOR USE

## EMERSON DV-121 KARAOKE PLAYER

### SAFETY

- 1 Do not use the karaoke machine outside or near water or moisture. Clean with a dry cloth only.
- 2 Plug the machine into a grounded, three-prong outlet. Use of an extension cord is not recommended. Be sure the cord is placed so that your guests will not trip over it or cause it to disconnect from the outlet.
- 3 **CAUTION:** Use on a stable surface only. Keep out of reach of children and pets.

### SETUP

- 1 Set up the DV-121 on a safe and stable surface. Plug in following directions above.
- 2 Connect your TV or monitor to the back of the machine. Use the included yellow video cable; plug one end into the VIDEO OUT jack on the DV-121 and the other end into your TV or monitor's VIDEO IN jack.
- 3 The DV-121 includes an internal speaker. We do not recommend the use of additional/external speakers with this player.
- 4 You may choose to use an external audio component, such as an iPod, in addition to the built-in CD player. You must supply your own cords for your components. These can be plugged in to the AUX IN area on the back of the player.
- 5 We recommend the use of specially designed karaoke CDs which allow you to view the words on a TV or monitor. You may use standard music CDs in the player but the words will not be displayed. Be sure that all CDs placed in the player are clean and scratch-free.

### USE

- 1 Turn ON the main amp power button on the back of the player. Turn ON the power button located on the front of the player.
- 2 Open the CD player by pushing the OPEN/CLOSE button on the front of the machine. Insert a karaoke CD into the player. Close the CD player by pushing the OPEN/CLOSE button again. Please do not attempt to push the CD tray in with your hands.
- 3 Plug in the included microphone to the jack on the front of the machine. Each microphone's volume is controlled separately by the MIC VOL 1/2 knobs at the front of the player. Additional microphones are available for rental.
- 4 The volume for the CD sound is controlled separately from the microphones by using the remote control. Adjust the volume of the microphones and CD sound until you have an even balance, then use the master volume knob located on the right side of the player to adjust total volume. Always start with the master volume set low until you have the sound and microphones balanced, then turn it up to the necessary volume.
- 5 Use the remote control to control the track playback on the player. The words will show up automatically on your TV or monitor if you are using karaoke-specific CDs.
- 6 When finished, turn the master volume down to the lowest level, remove any CDs from the player, and turn off both power buttons before unplugging. Disconnect the player from your TV or monitor, and disconnect all microphones. Return all components and instructions to the box and wipe unit clean with a dry cloth.

### RENTAL DEPOT

2200 Gillionville Rd Albany, GA 31707

(229) 883-5777 [www.rentaldepotonline.com](http://www.rentaldepotonline.com)